






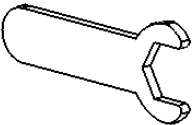
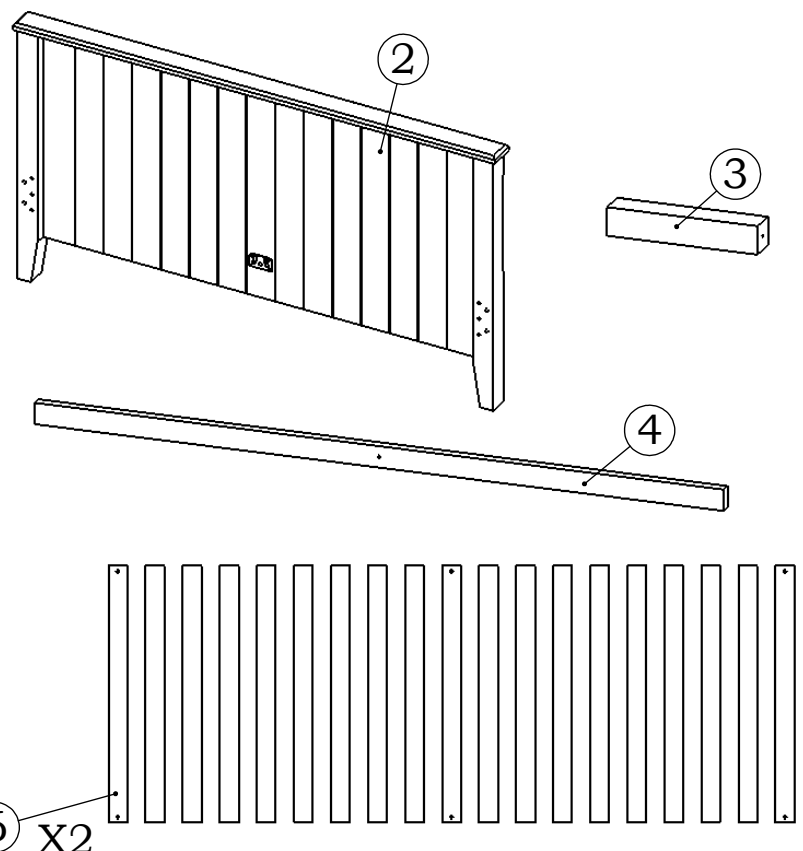
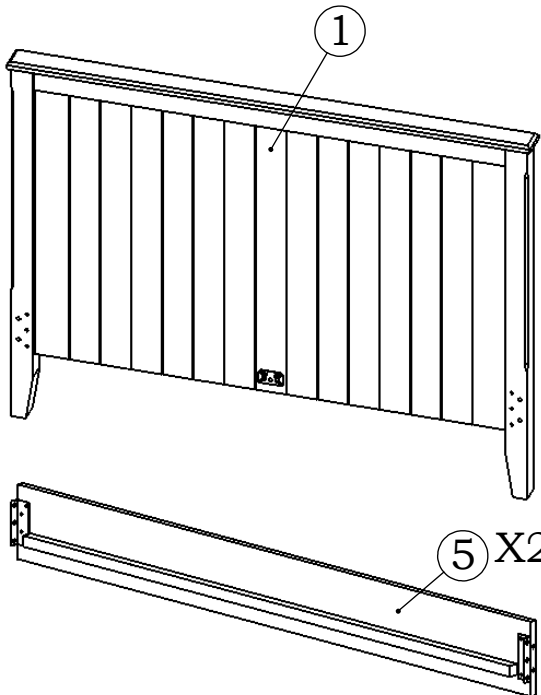



DEVON BED

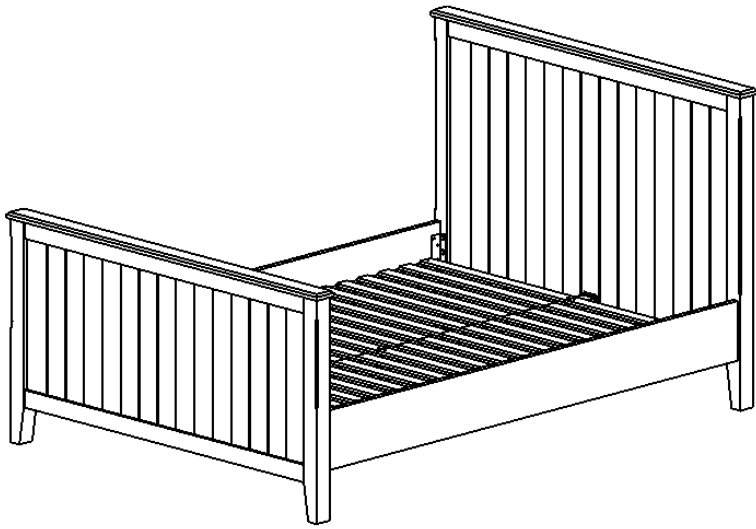


-  (A) X12
-  (B) X8
-  (C) X1
-  (D)
-  (E) X12
-  (F) X12
3.5X35
-  (G)





STEP 1




-  (B) X4

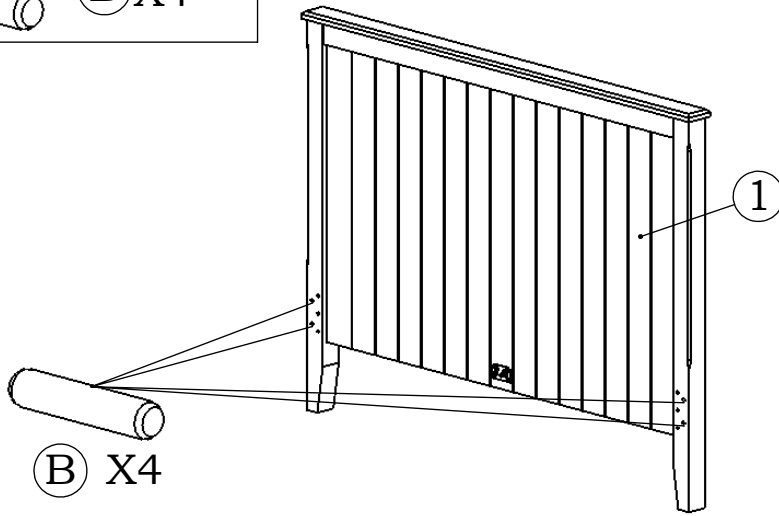



STEP 2

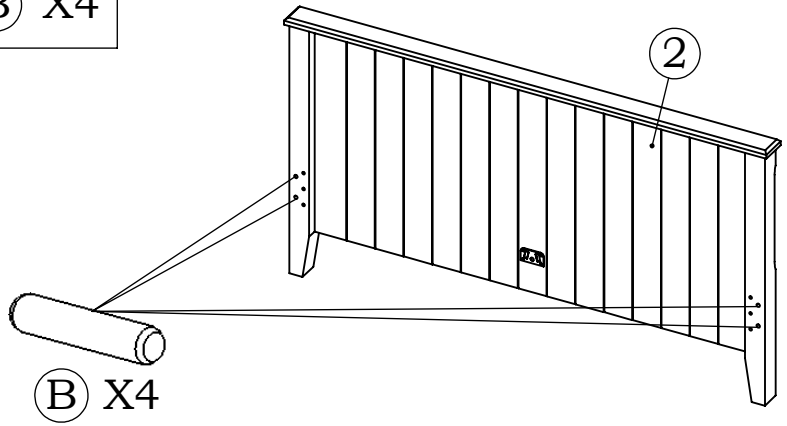


STEP 3

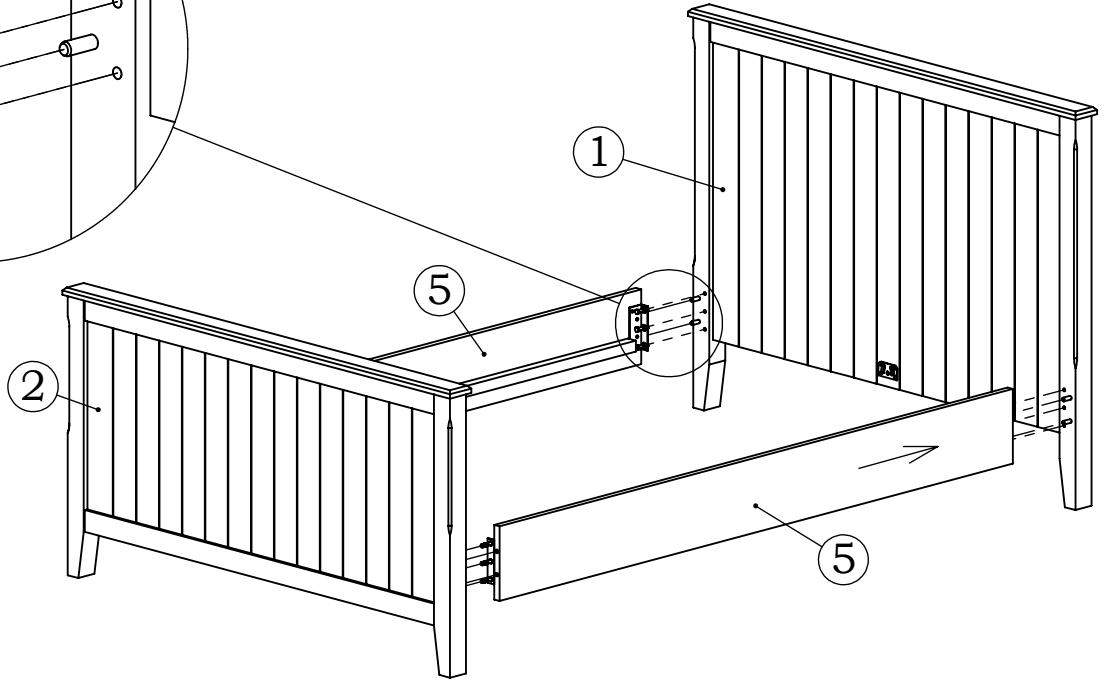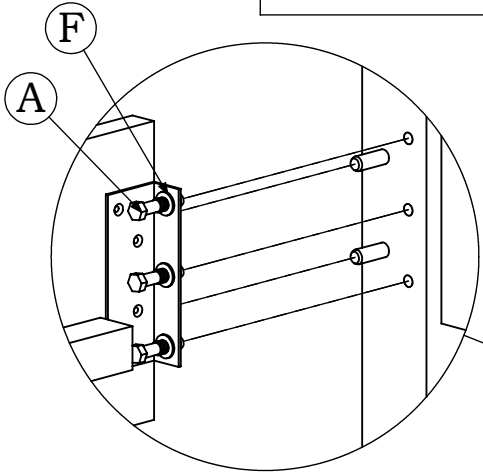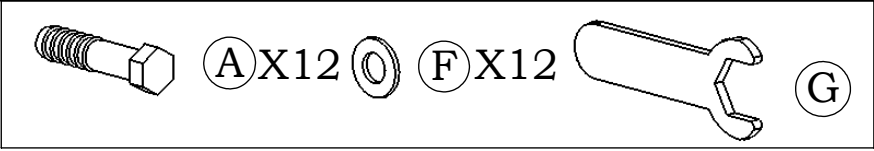



STEP 4

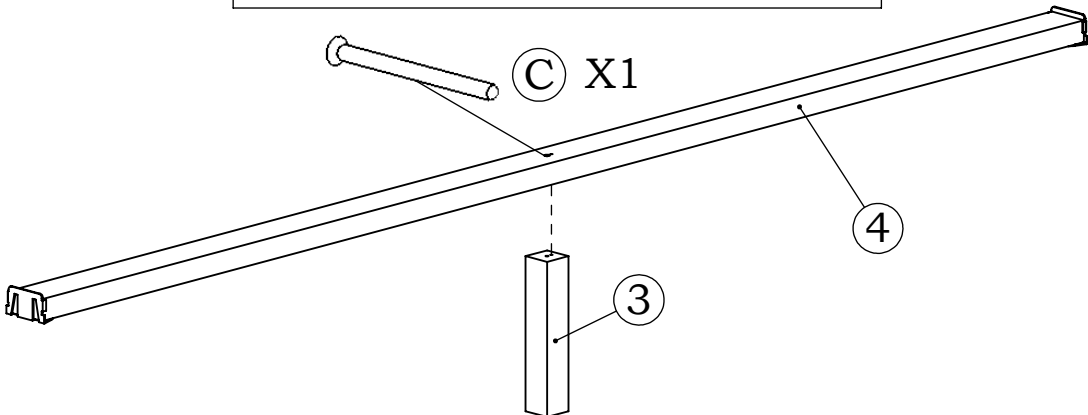

STEP 5

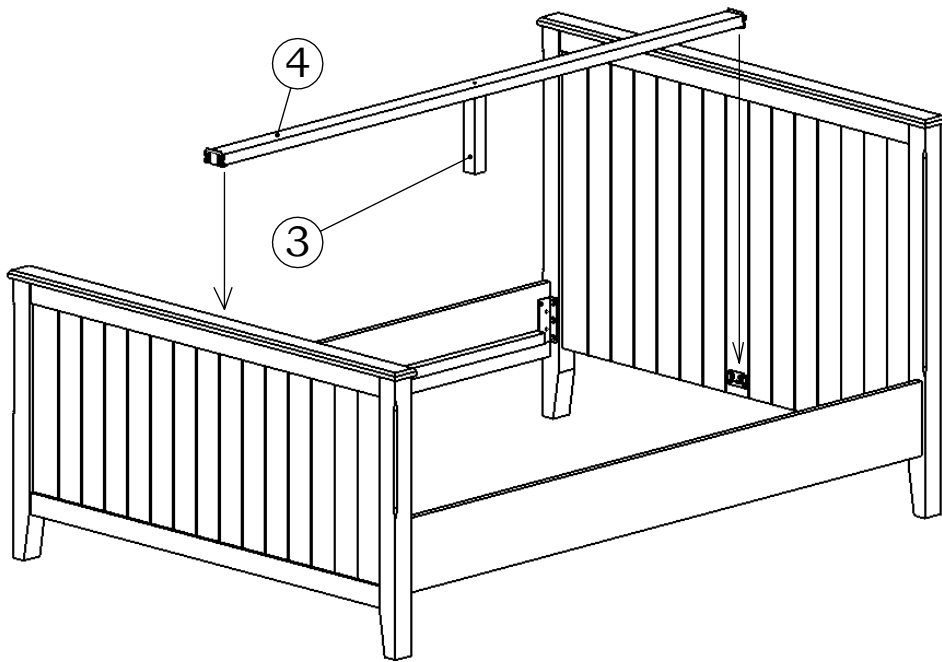

STEP 6

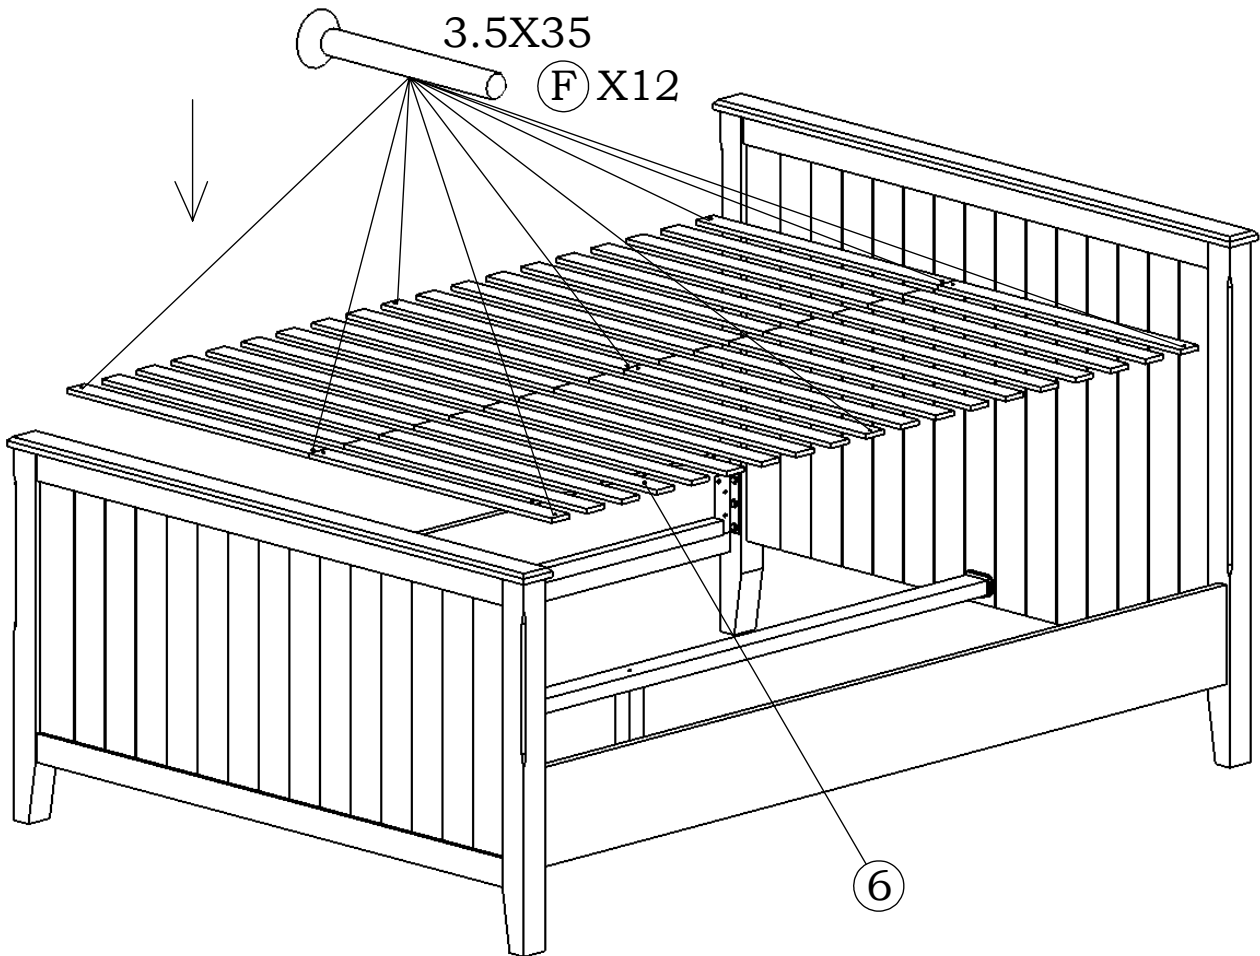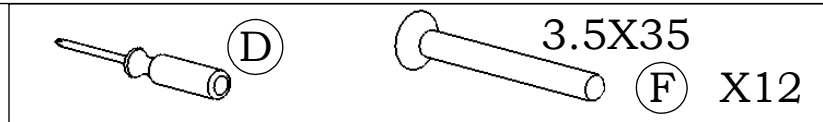

Important - Retain these instructions for future reference"