

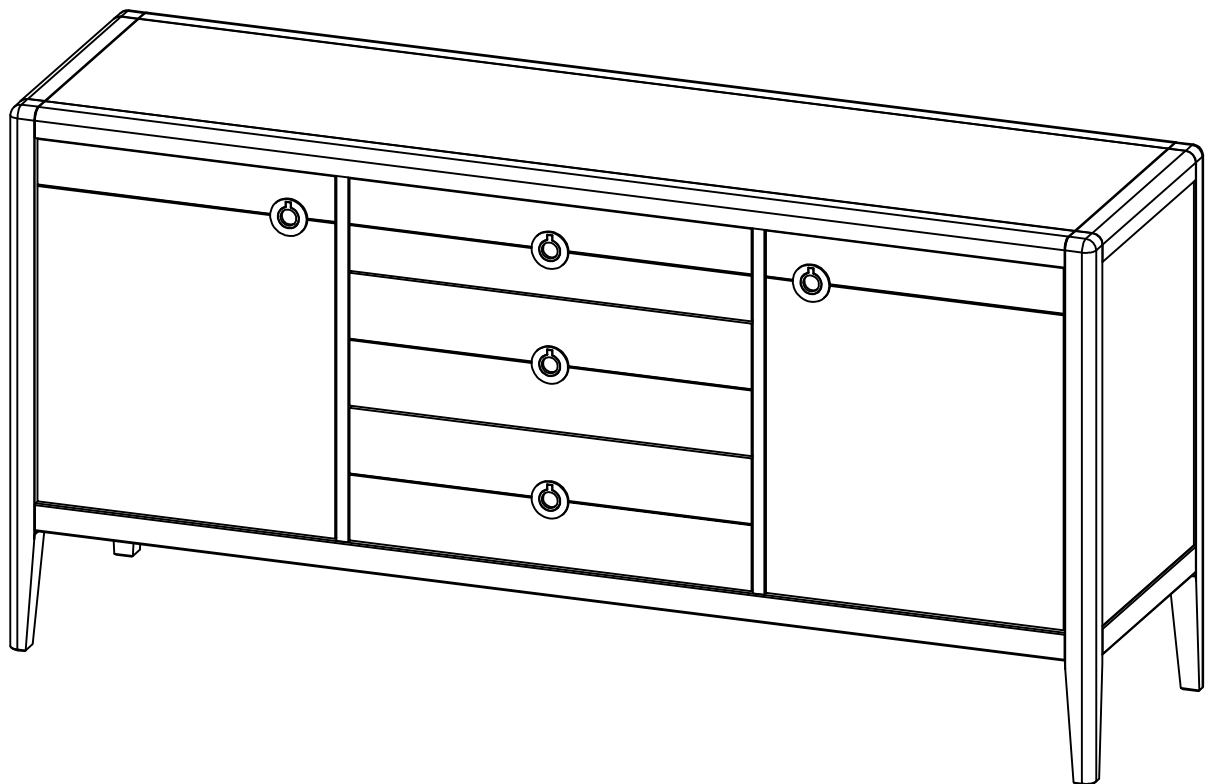
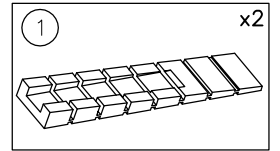
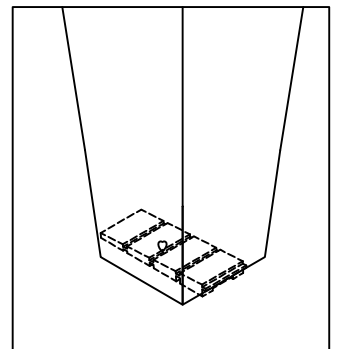
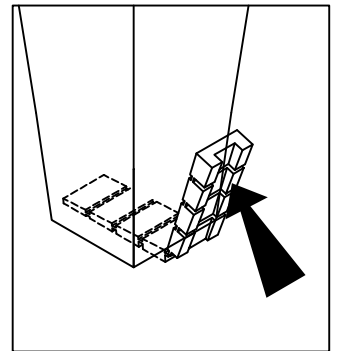
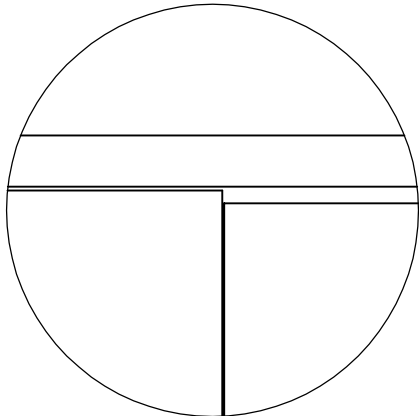
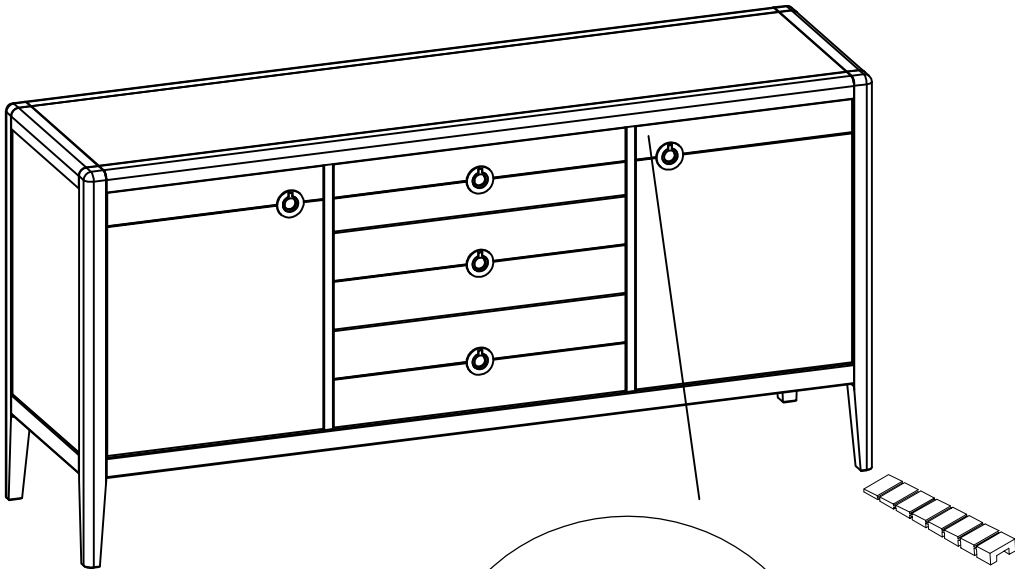
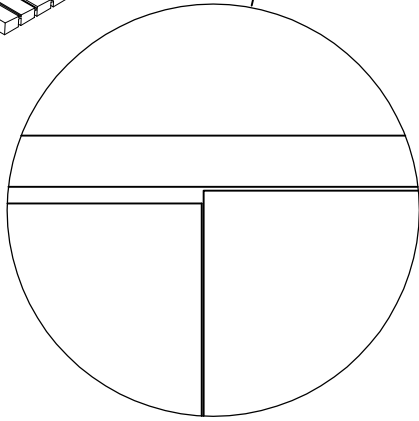


ASSEMBLY INSTRUCTION

FARNHILL SIDEBOARD 2D/3DRW. FAR2300

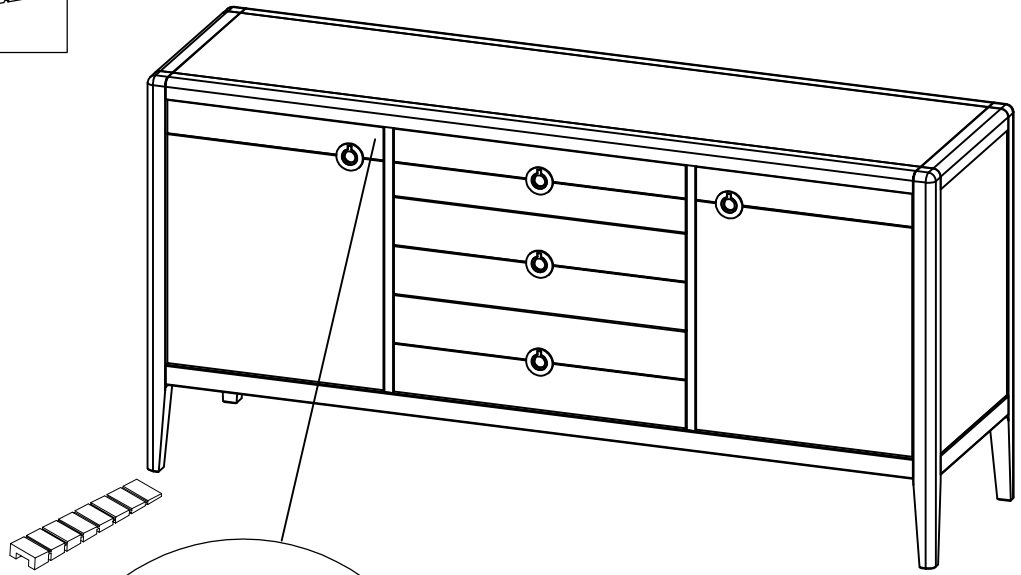

1

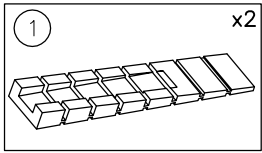

2

